




3381 User manual



MARNING

- Please read this manual before operation.
- This product is intended for 18 years and older.
- Keep this product out of reach of children.
- Wear always protection googles when handling the product.
- Face protection is also recommended while using the product.
- Never aim the rifle or shoot at yourself, other people or animals.
- Don't keep your finger on the trigger unless you're ready to shoot.
- Be careful of possible ricochets because a ricochet shot is just as dangerous as a direct one.
- Inappropriate use can cause injuries, even serious.
- Stop using the rifle when battery voltage is low.
- Stop using the rifle in case of malfunction.
- Use only high quality 6mm BB to avoid malfunction or damages.
- Never reuse BB that have already been fired.
- When not using the rifle always switch the selector to "Safe", disconnect the battery, remove the magazine.
- Do not modify and/or tamper the rifle in any way.



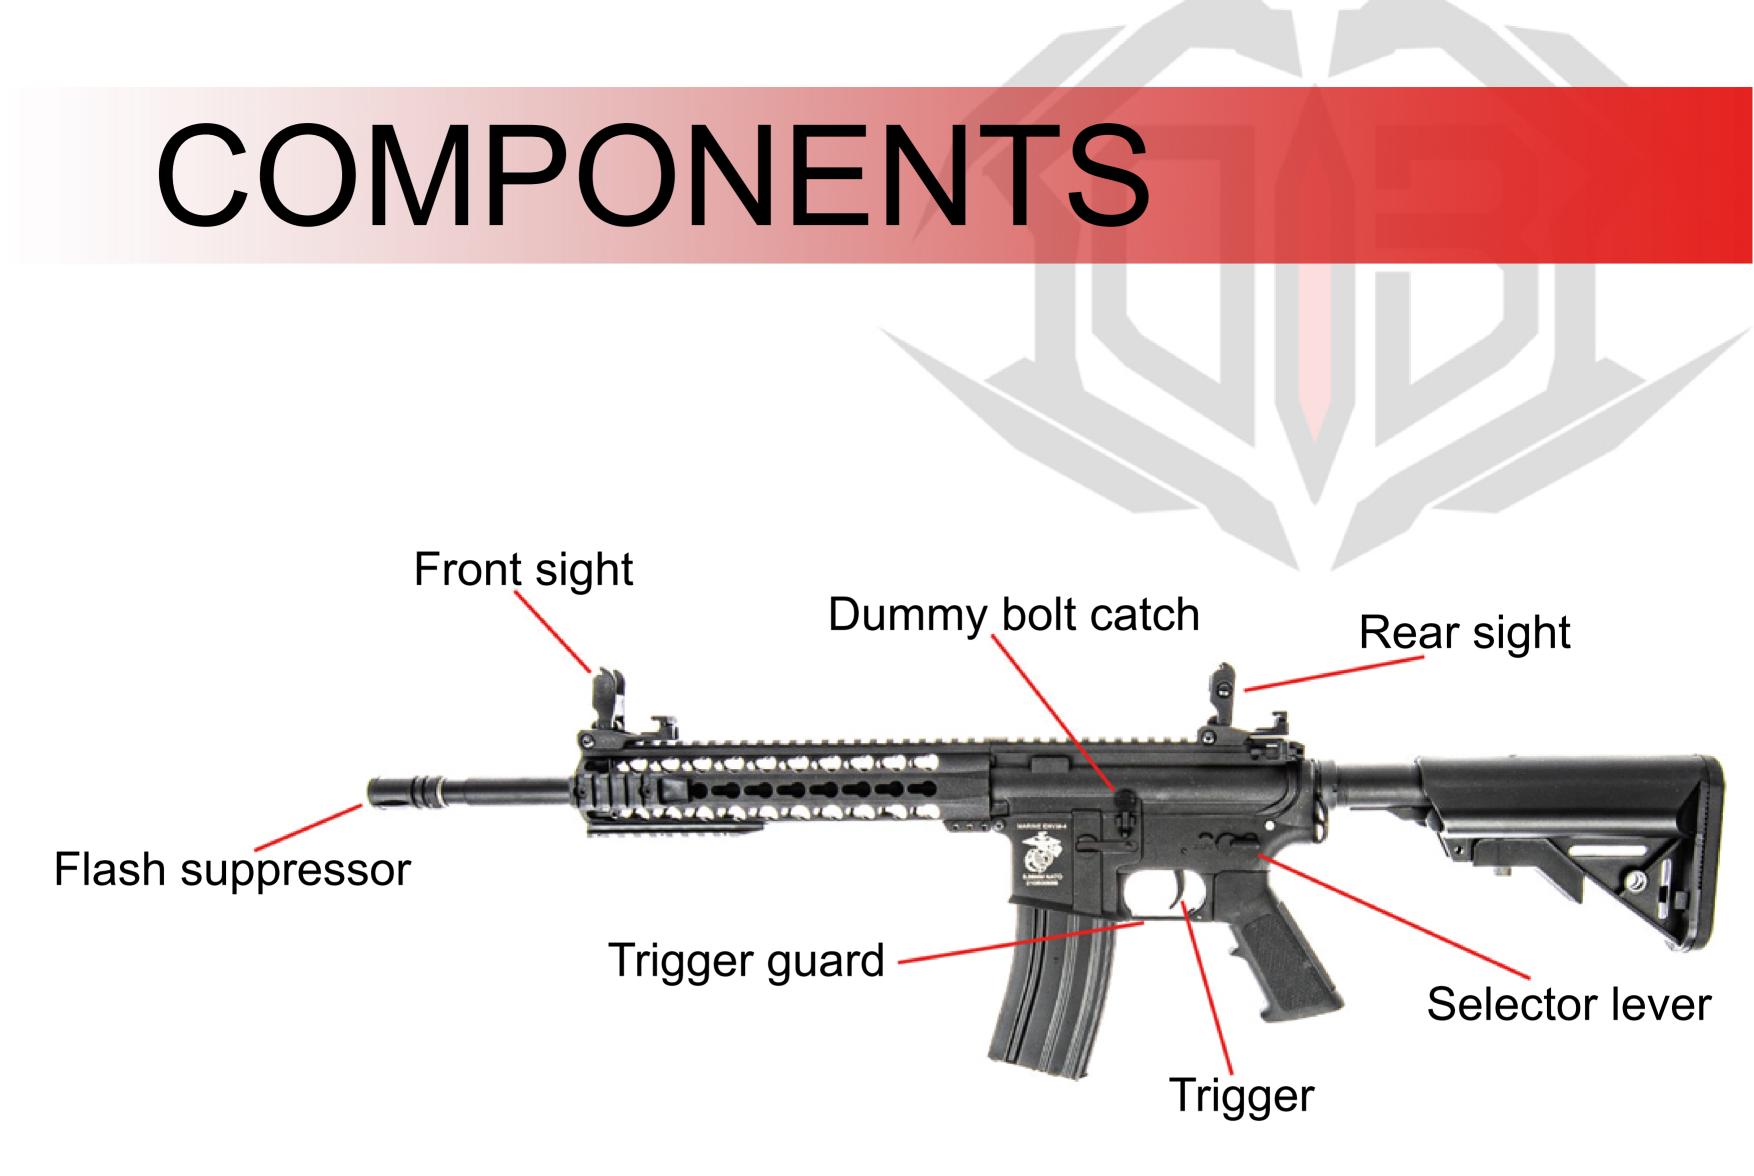





FIRE SELECTOR





Safe: the rifle will not shoot.



Semi: the rifle will shoot one BB for each trigger pull.



Auto: the rifle will continue to shoot repeatedly until the trigger is pressed.

BATTERY INSTALLATION

Before installing or changing the battery, remove the magazine and set the fire selector lever to "Safe".



1- Grasp the stock extension lever and pull it down.



4- Connect the battery (Tamiya plug) to the connection cable.



2- Keeping the lever pulled downward, extract the stock completely.



5- Insert the battery and cable inside the stock pipe.



3- Remove the connection cable from the stock pipe.



6- Reassemble the stock by pulling the lever downward.



HOP UP ADJUSTMENT

Before starting the adjustment, set the selector to "Safe".



1- Pull the cocking lever to open the port cover. Pay attention to avoid catching your fingers in the bolt.



2- Keeping the cocking lever pulled, act on the hop up ring to adjust it.



3- Release the cocking lever.

Too much hop up

Right trajectory


Not enough hop up

BBLOADING

Before starting BB loading, set the selector to "Safe".



right side of the rifle and remove the magazine.

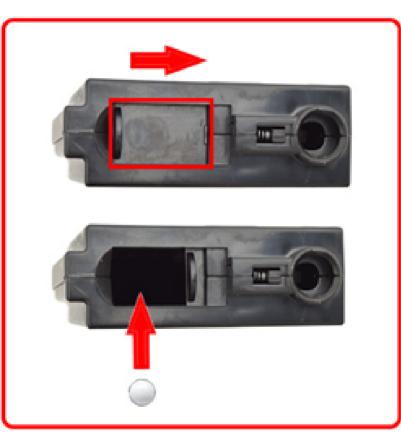

1- Press the release button on the 2- Use the opening on the top side of the magazine to insert the BB into the tank (max approximately 300). At the end close the door.



3- Turn the wheel located under the magazine until you hear the "click" to load the pellets from the tank to the "firing line". Repeat every time you finish the

BB in the "firing line" but you still have BB in the tank.




4- Reinsert the magazine until hear the "click".



STOCK ADJUSTMENT



1- Press the adjustment lever e at the same time pull back the stock.

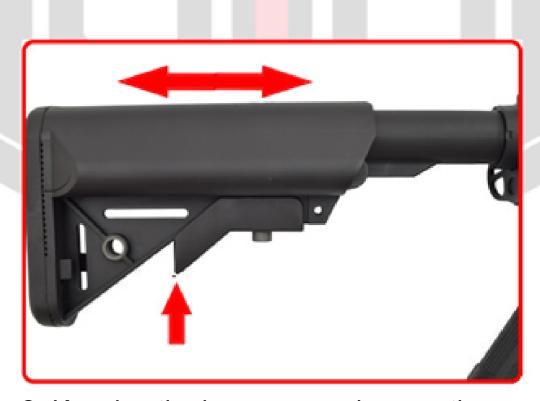

2- Keeping the lever pressed, move the stock to the desired position then release the lever and move slightly forward or back the stock until you hear the "click".

FLIP-UP SIGHTS



To open the sights, press the appropriate button.



To close the sights press the button and lower the sights.



The rear sight have adjustable windage. Uses the wheel located on the right of the rear sight for adjustment.

